
OZASHIKI POKER

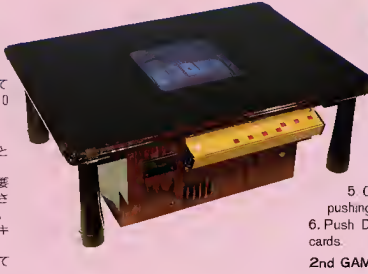

遊び方

第1ゲーム
コインまたは紙幣を投入して下さい。BETボタンで1－10迄掛けられます。
（BET20 RAISE20）
DEA/DRAWボタンを押すとカードがオープンします。
HOLDボタンを押して、必要なカードをホールドして下さい。ホールドしたカードは、CANCELボタンを押せば、キャンセルできます。
DEAL/DRAWボタンを押してカードを開いて下さい。

第2ゲーム「ダブル・アップ・ケーム」
勝ったときは、TAKE SCOREかDOUBLE-UPゲームのいずれかを選んで下さい 次に配られたカードか8以上だと思う場合にはBIGに 6以下だと思う場合にはSMALLに 勝ち分を掛けて下さい 5000点を越える勝ち分は 自動的にたくわえられます

HOW TO PLAY

I st GAME
1 Insert coin/bank note
2 Push BET button,1－10 credits multiple play
3 Push DEAL/DRAW button
4 Push HOLD buttons to hold cards you need
5 Cards held can be cancelled by pushing CANCEL button
6. Push DEAL/DRAW button to draw cards.

2nd GAME "DOUBLE-UP GAME"
When you win, choose TAKE SCORE or DOUBLE-UP game bet winnings on "BIG (8 and more number) or "SMALL (6 and less number)" of next one card dealt Over 5,000 Winnings will be storaged automatically.

ニーズにこたえた
パニックマシーン



株式会社 ショウエイ
〒183 東京都府中市天神町4－3－9
TEL 0423-66-2664(代) TELEX 2832548

Shoei CO.,LTD.
4-3-9 Tenjincho Fuchu Shi, Tokyo JAPAN
TELEPHONE 0423-66-2664 TELEX 2832548 SHOEI J